




1. Unpack the lamp

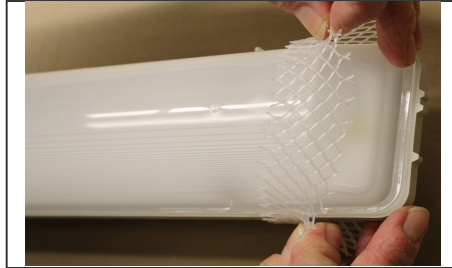


2. Remove the plastic from both ends stocking



3. Remove the plastic diffuser



4. Unclick the plastic latches and unfold plate with LED. The sheet metal is suspended for insurance premiums plastic curtains

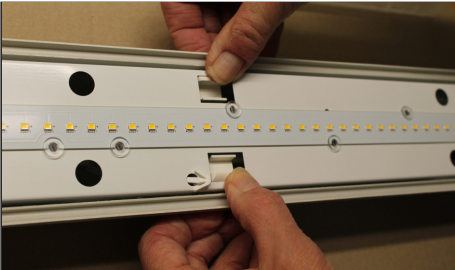


5. Prepare the clips from the accessories hanging, hanging




6. Fasten the clips to the substrate in the given spacing of mounting points on the light fixture



7. According to the location of the prepared power cable drill a hole in the plastic cover of the lamp, put on the rubber grommet and thread it through power cord

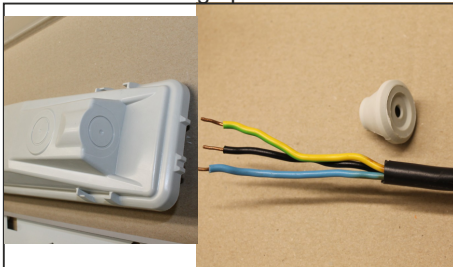


8. After connecting the power cable a snapping of the lamp body to the clips refit the plate with the LED and close it plastic diffuser

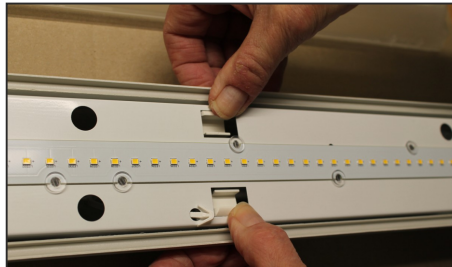

9. Snap the plastic diffuser body clips light fixtures




10. For installation in outdoor spaces, the lamp must be provided with a cover.

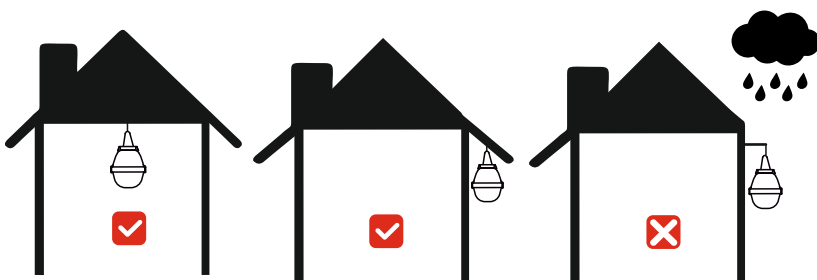



## Wiring diagram of a lamp with an emergency module

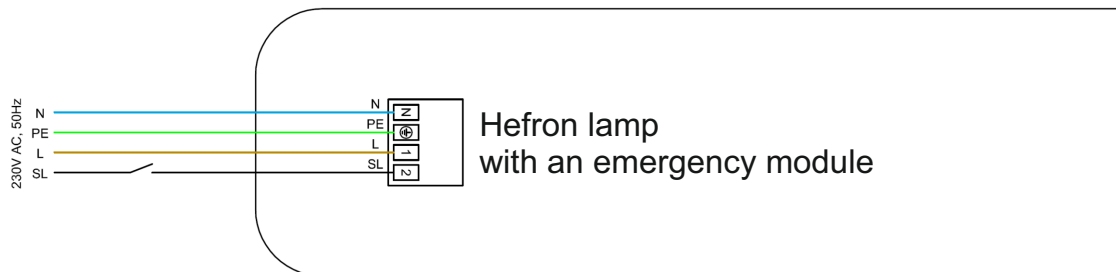

- L - permanent phase (line) - power supply and charging of the emergency module
- SL - switching phase (Switched line) - lighting control with a switch
- N - neutral conductor
- PE - protective conductor

### MAINTENANCE

Maintenance and repairs must be carried out in a de-energized state.

### CLEANING

The luminaire can be cleaned with standard cleaning agents. Do not use abrasive cleaning agents (powders) or solvents. Clean the polished surface of the reflector with a brush dipped in an alcohol-based cleaner.

### WARRANTY

According to the valid general business conditions of ELEKTRO-LUMEN, s. r. o., the warranty on the supplied goods, except for batteries for emergency power sources, is 24 months from the date of receipt. The warranty on batteries for emergency power sources is 6 months from the date of receipt, provided that proper battery formatting has been carried out. This does not apply to contractual warranties.

### SAFETY AND HEALTH PROTECTION AT WORK (BOZP)

When installing and working with the luminaire, follow the safety and health protection rules at work. Possible risks include: working at heights, falling small objects and shavings, sharp edges, electric shock, etc. Basic protective equipment to be used according to the situation and tools used: work clothes and shoes, protective goggles, safety helmet, protective gloves, reflective vest, and hearing protection (not provided by ELEKTRO-LUMEN, s. r. o.).

### NOTICE

The photos in the installation manual are for illustrative purposes only. Installation and electrical connection must be carried out by personnel with electrotechnical qualifications according to Decree 50/78 Coll. Luminaires can only be operated if they are undamaged and clean. The manufacturer accepts no responsibility if the product has been modified or improperly installed. Installation and use must be in accordance with the general Technical requirements, which are publicly available on the website: <http://el-lumen.cz/o-spolecnosti/dokumenty/>

### DISCLAIMER

Changes without prior notice reserved. Errors and omissions excepted. Always make sure you are using the latest version of the installation manual (available at [www.el-lumen.cz](http://www.el-lumen.cz)).

ELEKTRO-LUMEN, s. r. o.  
Hranická 505,  
753 61 Hranice IV  
Czech Republic

The company reserves the right to change technical data and printing errors.  
Copyright © ELEKTRO-LUMEN, s. r. o.

